


# Film Joining & Repairing Outfit

The Repairing-Outfit is indispensable to the Operator who wishes to be able to quickly mend an accidentally damaged perforation.

The Outfit contains 100 perforated patches, and a pair of tweezers.

To make a repair proceed in the following manner :

Place the Film on the "BABY" joining press, the perforation to be repaired, being fixed on the centre tooth "A" (see figure at side), the shiny side upwards.

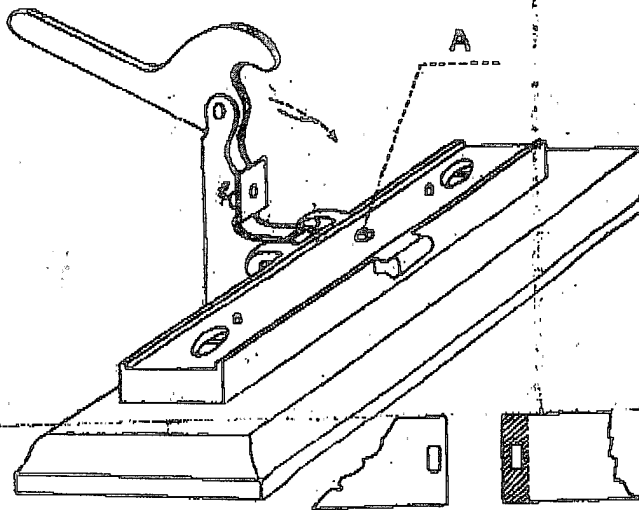

Apply quickly a little "BABY" cement all round the perforation to be repaired, and place immediately upon it a patch covered with "BABY" cement. Lower the pressing lever, and hold it locked for 30 seconds.

In order to join a broken film proceed in the following manner :

Cut straight with a pair of scissors both ends of the Film, leaving half a millimetre from the perforation (figure 1). Place the first perforation of one of the ends on the left hand side of the tooth "A", dull side downwards, then on the other end of the Film, scrape the gelatine off as far as the dotted line on the

figure (filled in section). Apply "BABY" cement to the scraped portion, and place it immediately on to the other part already held by the tooth "A". Close down the pressing-lever, and keep it locked for 30 seconds.

## "BABY" FILM CEMENT

The "BABY" Film cement is especially made for joining the "Baby" non-Flam Film, ordinary joins, perforation repairs, etc.

Other cements should not be used, as they never make lasting joins, and render the Film brittle.

IMPORTANT NOTE. — Keep the bottle well corked.

PATHE EXCHANGE  
"PATHEX"  
PROJECTOR & CINE-CAMERA DEPT.

35 West — 45 th. Street  
NEW YORK CITY